

QUICK RELEASE SOCKET WRENCH REPAIR

Simple instructions for maintaining any Lowell 50QR Series Quick Release Socket Wrench



1. Remove all parts, clean the inside of the wrench and all parts



2. Lightly lubricate the inside of wrench where the pawls sit with lithium grease. Replace pawls, pawl springs and shifter



3. Install plastic spacer, insert tension springs (2) into slots provided in spacer, insert latch (making sure tension springs are engaged), put on cover plate and secure with cap screw



4. Pull back latch, insert socket

| Model | Repair Kit* | Cover Plate Kit** |
|-------|-------------|-------------------|
| 50QR | 36902 | 36903 |
| 51QR | 36902 | 36903 |
| 564QR | 36902 | 36903 |
| 52QR | 53Q02 | 53Q03 |
| 53QR | 53Q02 | 53Q03 |

*Repair Kits include – pawls (2), pawl springs (2) and shifter (1)

**Cover Plate Kits include – cover plate (1), plastic spacer (1), latch (1), tension springs (2) and cap screw (1)



WWW.LOWELLCORP.COM

65 Hartwell St., West Boylston, MA 01583
 Ph 508-835-2900, Fax 508-835-2944
 Toll free 800-456-9355
 customerservice@lowellcorp.com